



## MC-NC2-DL-44

**Nurse Call-Dome Light  
4 Color, 4 Input  
Red, Yellow, Green, and White**

The **MC-NC2-DL-44** is a stylish, exceptionally bright Nurse Call Dome Light. It is the central tie point for the Patient Room, with wiring going to the Call Stations and to the Central Control Module. The Call stations are equipped with Momentary Switches that are monitored and latched in the Central Control Module. The Call stations have Call Confirmation Indicators that display the same output as the Dome Light.

The **MC-NC2-DL-44** supports Normal Calls and Emergency Calls. When no calls are originating from a room, the Dome Light is Off. The 4 colors Red, Yellow, Green, and White are associated with separate station locations in a single room or space. Each color indicates a call from a separate station. The Dome Light will only turn off when calls are cancelled at Call Stations.

The **MC-NC2-DL-44** are equipped with RJ45 CAT5 connector for installation convenience. A single Dome Light can monitor and display 4 system station ports for discrete audio to 4 patient stations in a single room. There is a separate In and Out connector for each of the 4 stations displayed by each dome light.

### BENEFITS

- Reliable Signaling
- No Maintenance
- Low Power
- Simple Wiring
- Easily Integrates to other Systems
- Attractive Station Hardware

### Associated Equipment

MC-IP-116-NC2	Audio Intercom Control Module
MC-NC2-VPBS	Bed Station
MC-NC2-VP-SAS	Staff Assist Station

### Design Information

<b>Power</b>	24V DC @ 80mA
<b>Color</b>	White
<b>Mounting</b>	1 or 2 Gang Back Box
<b>Dimensions</b>	5" W x 3" D x 5" H
<b>Weight</b>	1 lb.




**Tech Works**®

*"Making Specialized Communication Easy"*



## Quick Start Installation Instructions

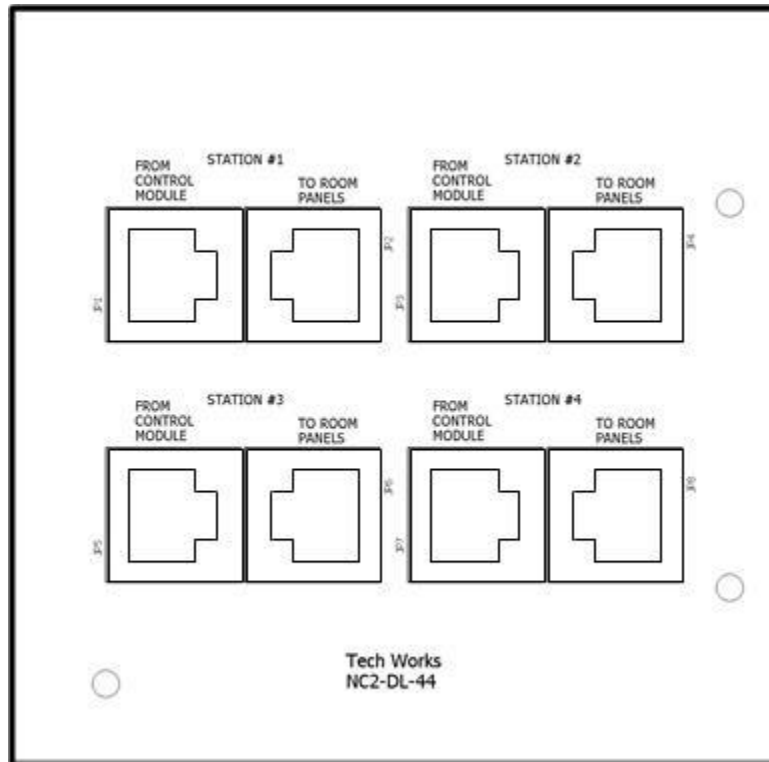

### Wiring

The MC Stations have a variety of options and features that are unique to each product. All Station wiring is a CAT5 or CAT6 in and out. The installer then chooses if the call is and “E” for Emergency or an “N” for a normal call to set the station priority and the Channel which set the top or bottom of an associated dome light.

### Architects' and Engineers' Specifications

The Nurse Call System Dome lights shall be LED type with super bright light output and wide viewing angle. Four call station inputs shall provide signaling of both Normal and Emergency Call from each station. Each station associated with the dome light shall have a different color to identify the calling station. Dome light colors shall be Red, Yellow, Green, and White

The Nurse Call System Dome Lights shall be: Tech Works Model MC-NC2-DL-44

