



# NC-VP-SAS

## Nurse Call Vandal Proof Staff Assist HELP Station



UL 1069 and CSA C22.2#205  
5002971

The Tech Works **NC-VP-SAS** is a call for HELP Station with a Vandal Resistant Push button with concentric Call Assurance Light built in to the button and mounted on a rugged stainless-steel plate. A convenient Push for Help button is provided for activating the Emergency Call directly at the station. Staff is provided with a distinctive "CANCEL" button to reset the station.

An integral call confirmation LED notifies the user that a call has been sent. The Call Assurance Light will be Off if no call is pending, glowing steadily if a Normal Call is pending, and flashing if an Emergency Call is pending.

This is a passive button and light assembly designed for use with active stations like the **NC-DL-12** Dome Light. Screw Terminals provide wiring connection to the active electronic stations that provide signaling and control for the **NC-VP-SAS**.

Mounting is a standard 1-gang electrical box. The Face Plate is made of 12-gauge Stainless Steel with a brushed finished and includes tamper resistant mounting screws.

### BENEFITS

- Reliable Signaling
- No Maintenance
- Low Power
- Simple Wiring
- Easily Integrates to other Systems
- Attractive Station Hardware

### Associated Equipment

**NC-DL-12** Dome Light

### Design Information

<b>Power</b>	15V DC
<b>Color</b>	Stainless Steel
<b>Mounting</b>	1 Gang Back Box
<b>Dimensions</b>	3.25" W x 0.5" D x 5" H
<b>Weight</b>	1 lb.

### Architects' and Engineers' Specifications

The Nurse Call System Staff Assistance Station shall be a standard one gang electrical box mounting device constructed of Vandal Resistant Stainless Steel. A convenient Push for Help button shall be provided for activating the Emergency Call directly at the station and a distinctive "CANCEL" button to reset the station.

A call confirmation light shall be included to indicate that a call has been placed. The staff station shall be a passive electronic device requiring no more than 3 mA at 15 Volts DC for full operation.

The Nurse Call System Staff Presence Station shall be Tech Works Model NC-VP-SAS




# Tech Works®

"Making Specialized Communication Easy"



## Quick Start Installation Instructions

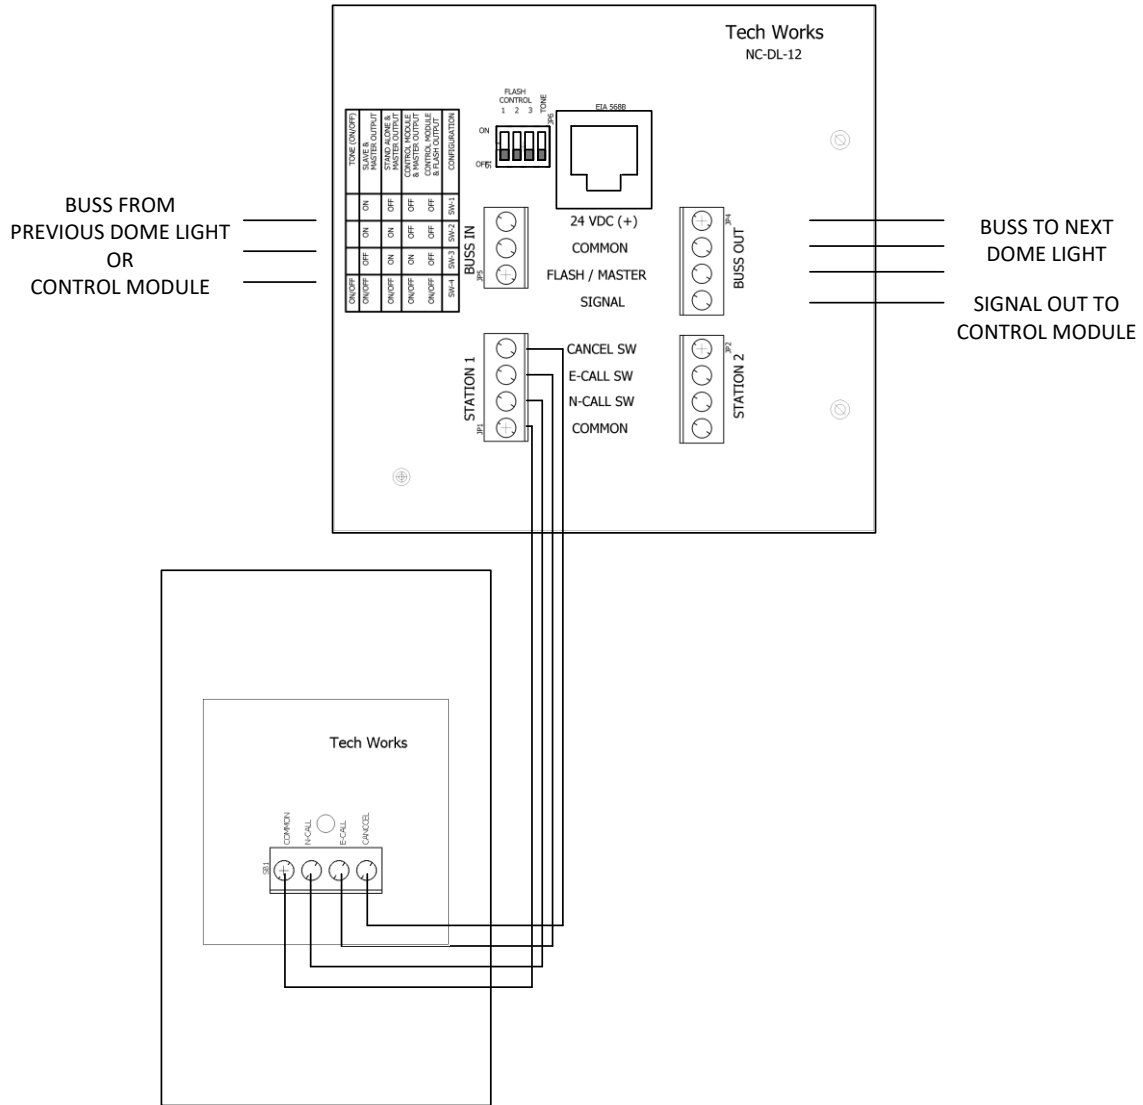

For further system set up and adjustment please see the System Planning Guide by scanning the QR Code.

