



The Tech Works **NC-CBAS** is a Code Blue Station with a Staff Assist Help Button in a semi-flush ABS plastic enclosure for durable emergency signaling. A "CODE" button generates a light signal to notify staff that Emergency Help is needed in a room. A convenient Staff button is also included for activating the Local Staff Call directly at the station. A distinctive "CANCEL" button is provided to reset the station.

An integral call confirmation LED notifies the user that a call has been sent. The Call Assurance Light will be Off if no call is pending, glowing steadily if a Normal Call is pending, and flashing if an Emergency Call is pending.

This is a passive button and light assembly designed for use with active stations like the **NC-DL-22** Dome Light. Screw Terminals provide wiring connection to the active electronic stations that provide signaling and control for the **NC-CBAS**.

Mounting is a standard 1-gang electrical box. An integral back plate provides mounting and adaptor alignment for the **NC-CBAS**.

NC-CBAS

Nurse Call Code Blue plus Staff Station



UL 1069 and CSA C22.2#205
5002971

BENEFITS

- Reliable Signaling
- No Maintenance
- Low Power
- Simple Wiring
- Easily Integrates to other Systems
- Attractive Station Hardware

Associated Equipment

NC-DL NC-Series Dome Light

Design Information

Power 15V DC
Color White
Mounting 1 Gang Back Box
Dimensions 3.25" W X 0.5" D X 5" H
Weight 0.25 lbs.

Architects' and Engineers' Specifications

The Nurse Call System Code Blue with Staff Assist Station shall be a standard one gang electrical box mounting device constructed of ABS plastic. A large CODE push button will let the system know that Help is needed in the room. A separate Staff button shall be included to place a Staff Needs Assistance Call to the System. A distinctive Cancel button shall be provided to reset the station. A call confirmation light shall be included to indicate that a call has been placed. The staff station shall be a passive electronic device requiring no more than 3 mA at 15 Volts DC for full operation.

The Nurse Call System Code Blue with Staff Assist Station shall be Tech Works Model NC-CBAS




Tech Works®

"Making Specialized Communication Easy"



Quick Start Installation Instructions

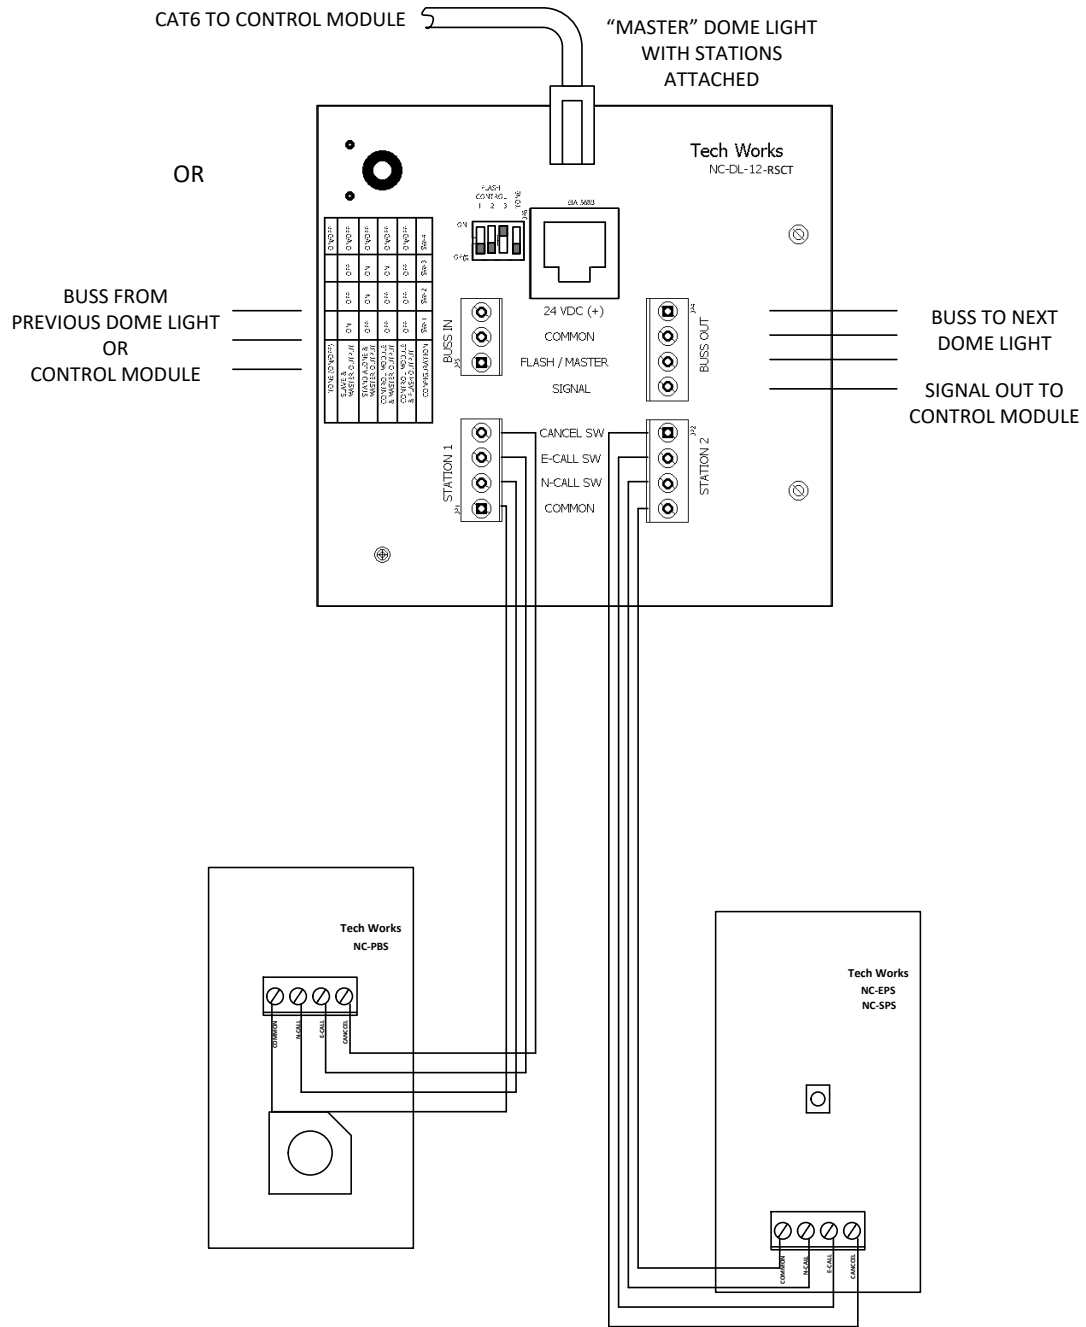

For further system set up and adjustment please see the System Planning Guide by scanning the QR Code.

