



The Tech Works **NC-PCBS-1** is a Patient Bed Station in a semi-flush ABS plastic enclosure for durable emergency signaling. A ¼" phone jack provides a supervised connection for a Call Cord like the **PBC-7**. The Call Cord provides the patient with call-for-help access. A Code Blue button is also included for initiating a Code Blue Call directly at the station. Staff is provided with a distinctive "CANCEL" button to reset the station.

An integral call confirmation LED notifies the user that a call for help has been sent. The Call Assurance Light will be Off if no call is pending, glowing steadily if a Normal Call is pending, and flashing if a Code Blue call is Pending.

This is a passive button-and-light assembly designed for use with active stations like the **NC-DL-12-R** Dome Light. Screw Terminals provide wiring connection to the active electronic stations that provide signaling and control for the **NC-PCBS-1**.

Mounting is a standard 1-gang electrical box. An integral back plate provides mounting and adaptor alignment for the **NC-PCBS-1**.

NC-PCBS-1

Nurse Call Patient Bed Station w/Code Blue Single Bed



UL 1069 and CSA C22.2#205
5002971

BENEFITS

- Reliable Signaling
- No Maintenance
- Low Power
- Simple Wiring
- Easily Integrates to other Systems
- Attractive Station Hardware

Associated Equipment

PBC-7	Call Cord
NC-DL-12-R	Passive Dome Light
NC-DL-12-B	Code Blue Dome Light

Design Information

Power	15V DC
Color	White
Mounting	1-Gang Back Box
Dimensions	3.25" W x 0.5" D x 5" H
Weight	0.25 lbs.

Architects' and Engineers' Specifications

The Nurse Call System Patient Bed Station shall be a standard one gang electrical box mounting device constructed of ABS plastic. A Code Blue button shall be included with a ¼: phone Jack for a call cord to provide both local code blue and remote push for help operation. A distinctive Cancel button shall be provided to reset the station. A call confirmation light shall be included to indicate that a call has been placed. The patient station shall be a passive electronic device requiring no more than 3 mA at 15 Volts DC for full operation.

The Nurse Call System Patient Bed Station shall be Tech Works Model NC-PCBS-1




Tech Works®

"Making Specialized Communication Easy"



Quick Start Installation Instructions

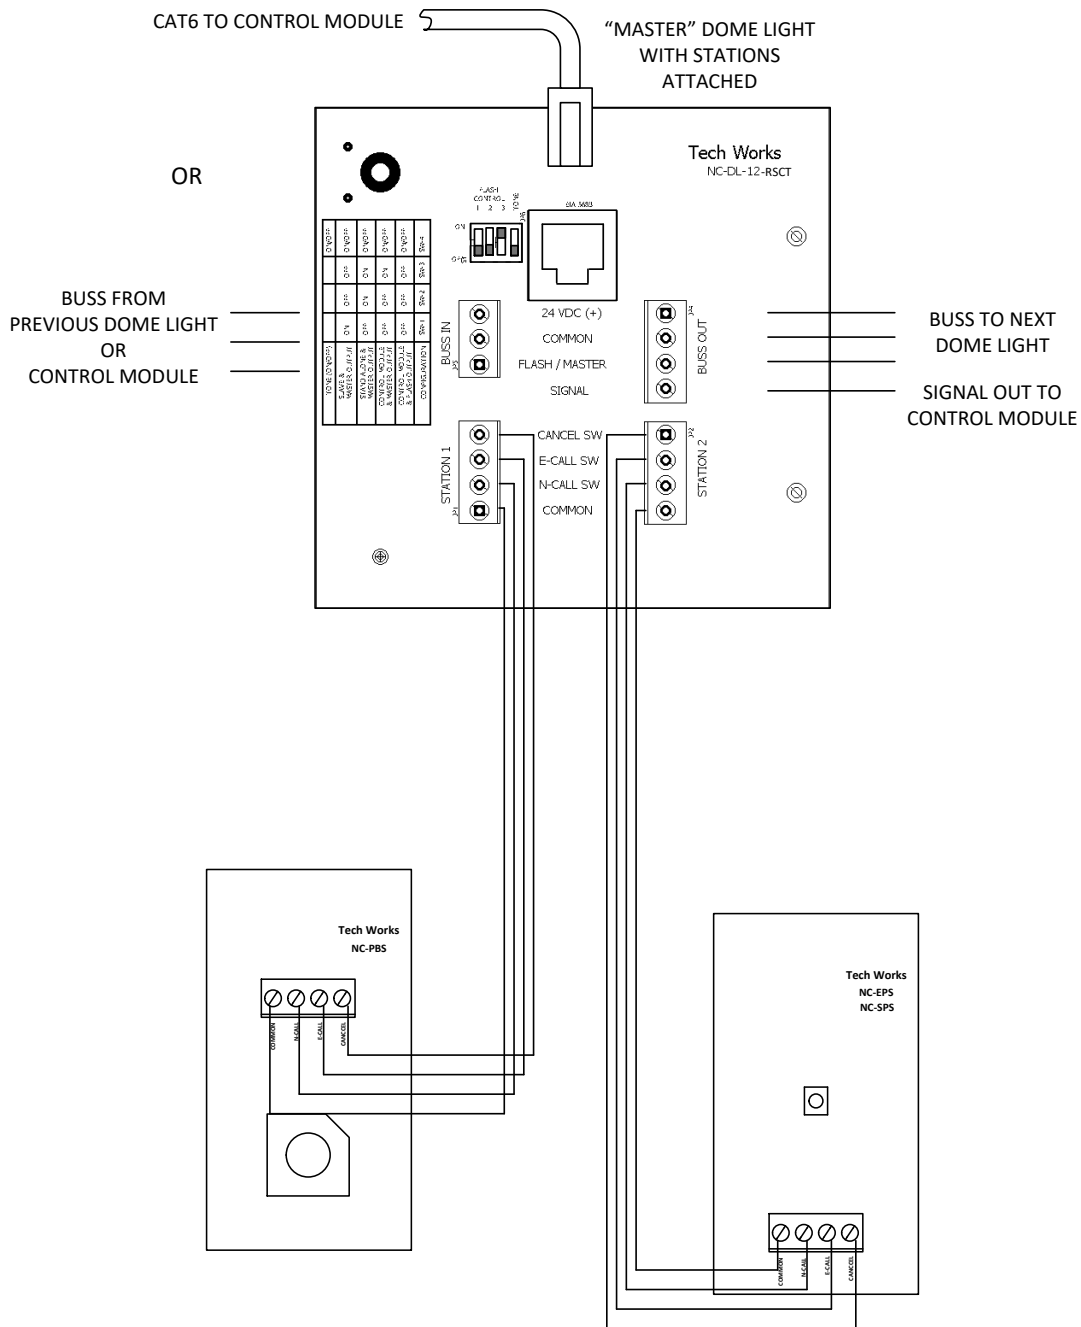

For further system set up and adjustment please see the System Planning Guide by scanning the QR Code.

