



NC-VP-CBS

Nurse Call Vandal Proof Code Blue Station with Large Blue Mushroom Switch



UL 1069 and CSA C22.2#205
5002971

The Tech Works **NC-VP-CBS** is a Code Blue Station with a giant mushroom button mounted on a rugged stainless-steel plate. Anywhere that staff needs to place a Code call but may not be able to use their hands, the NC-VP-CBS can be activated using an elbow, knee, or even as a kick plate for foot activation. A "CODE" button generates a light signal to notify staff that "Code" Help is needed in a room. The call Cancel is performed using a separate station with a distinctive lighted "CANCEL" button to reset the station like the Tech Works NC-CS or NC-VP-CS.

The call cancel station has an integral call confirmation LED to notify the user that a call has been sent. The Call Assurance Light will be Off if no call is pending, glowing steadily if a Normal Call is pending, and flashing if an Emergency Call is pending.

This is a passive button assembly designed for use with active stations like the **NC-DL-12** Dome Light. Screw Terminals provide wiring connection to the active electronic stations that provide signaling and control for the **NC-VP-CBS**.

Mounting is a standard 1-gang electrical box. The Face Plate is made of 12-gauge Stainless Steel with a brushed finished and includes tamper resistant mounting screws.

BENEFITS

- Reliable Signaling
- No Maintenance
- Low Power
- Simple Wiring
- Easily Integrates to other Systems
- Attractive Station Hardware

Associated Equipment

NC-DL-12	Dome Light
NC-CS	Cancel only Station
NC-VP-CS	Vandal Cancel Station

Design Information

Power	15V DC
Color	Silver
Mounting	1 Gang Back Box
Dimensions	3.25" W x 0.5" D x 5" H
Weight	1 lbs.

Architects' and Engineers' Specifications

The Nurse Call System Code Blue Station shall be a standard one gang electrical box mounting device constructed of Vandal Resistant Stainless Steel. A convenient Push for Help button shall be provided for activating the Emergency Call directly at the station and a distinctive "CANCEL" button to reset the station.

A call confirmation light shall be included to indicate that a call has been placed. The staff station shall be a passive electronic device requiring no more than 3 mA at 15 Volts DC for full operation.

The Nurse Call System Code Blue Station shall be Tech Works Model NC-VP-CBS with




Tech Works®

"Making Specialized Communication Easy"



Quick Start Installation Instructions

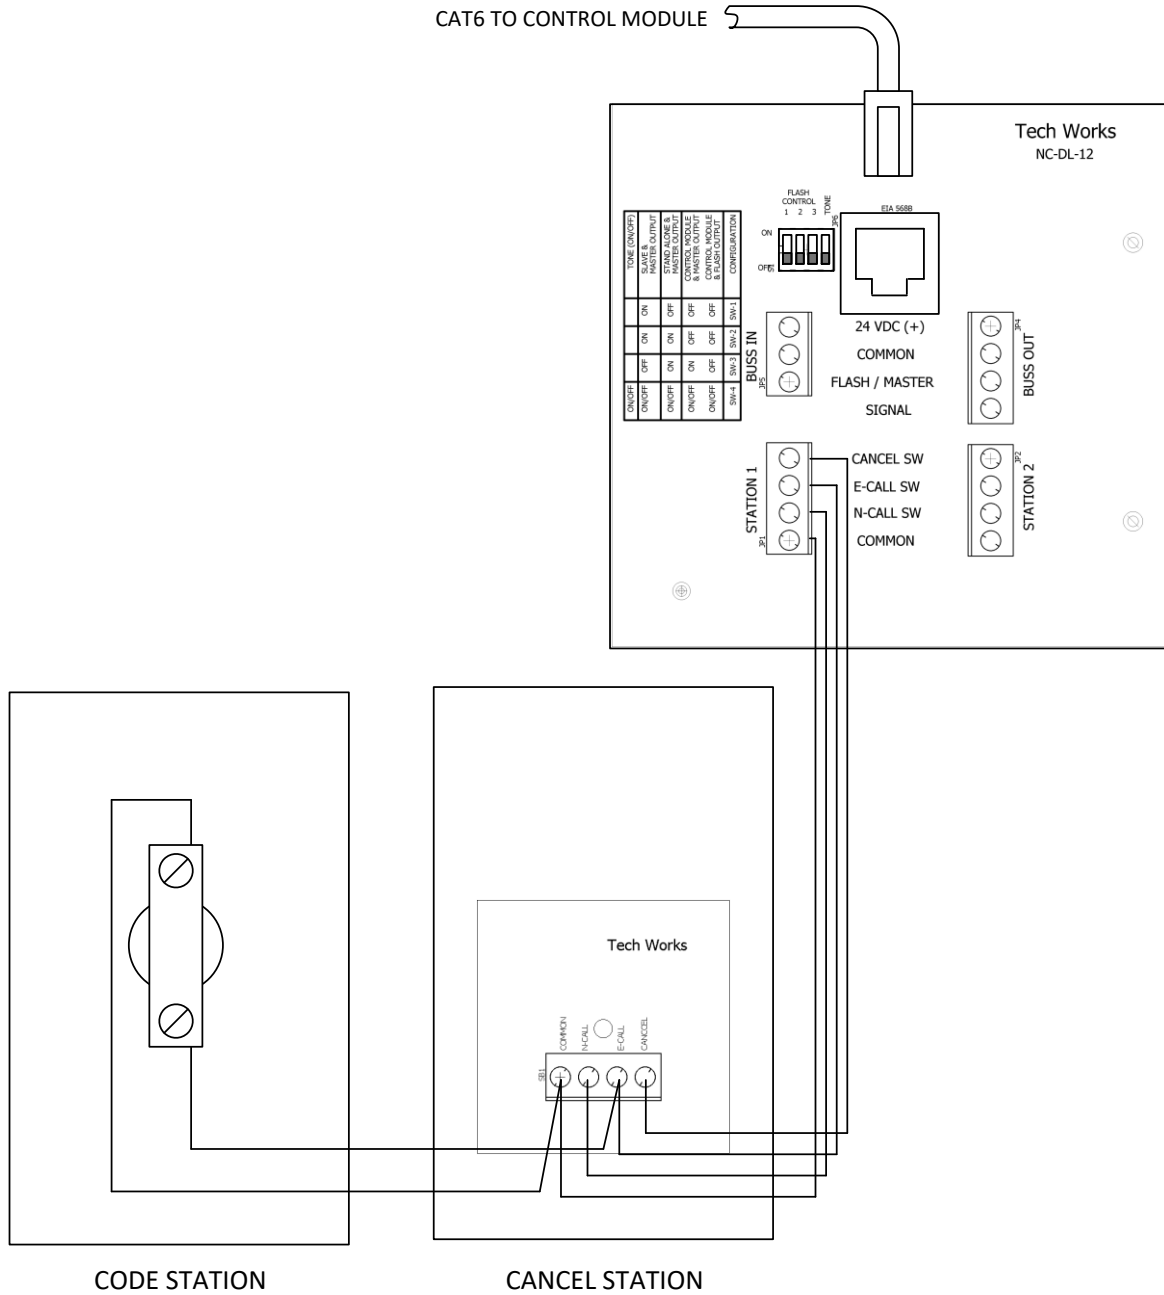

For further system set up and adjustment please see the System Planning Guide by scanning the QR Code.

