



NC-VP-CS

Nurse Call Vandal Proof Cancel only Station

The Tech Works **NC-VP-CS** is a Cancel only Station with a Vandal Resistant Push button with concentric Call Assurance Light built in to the button and mounted on a rugged stainless-steel plate. This station is intended to be used with our other NC-Series products when a Remote Cancel only button is required to reset a dome light. Staff is provided with a distinctive "CANCEL" button to reset other station.

An integral call confirmation LED notifies the user that a call for help has been sent. The Call Assurance Light will be Off if no call is pending, glowing steadily if a Normal Call is pending, and flashing if a Call is Pending.

This is a passive button-and-light assembly designed for use with active stations like the **NC-DL-12** Dome Light. Screw Terminals provide wiring connection to the active electronic stations that provide signaling and control for the **NC-VP-CS**.

Mounting is a standard 1-gang electrical box. The Face Plate is made of 12-gauge Stainless Steel with a brushed finished and includes tamper resistant mounting screws.

BENEFITS

- Reliable Signaling
- No Maintenance
- Low Power
- Simple Wiring
- Easily Integrates to other Systems

Associated Equipment

NC-DL-12	Dome Light
NC-VP-SAS	Staff Assist Station
NC-VP-PBS	Patient Bed Station
VPBL-1	Push Button

Design Information

Power	15V DC
Color	Stainless Steel
Mounting	1 Gang Back Box
Dimensions	3.25" W x 0.5" D x 5" H
Weight	0.25 lbs.

Architects' and Engineers' Specifications

The Nurse Call System Cancel only Station shall be a standard one gang electrical box mounting device constructed of Vandal Resistant Stainless Steel. A distinctive Cancel button shall be provided to reset the station. A call confirmation light shall be included to indicate that a call has been placed. The Cancel station shall be a passive electronic device requiring no more than 3 mA at 15 Volts DC for full operation.

The Nurse Call System Cancel only Station shall be Tech Works Model NC-VP-CS.




Tech Works®

"Making Specialized Communication Easy"



Quick Start Installation Instructions

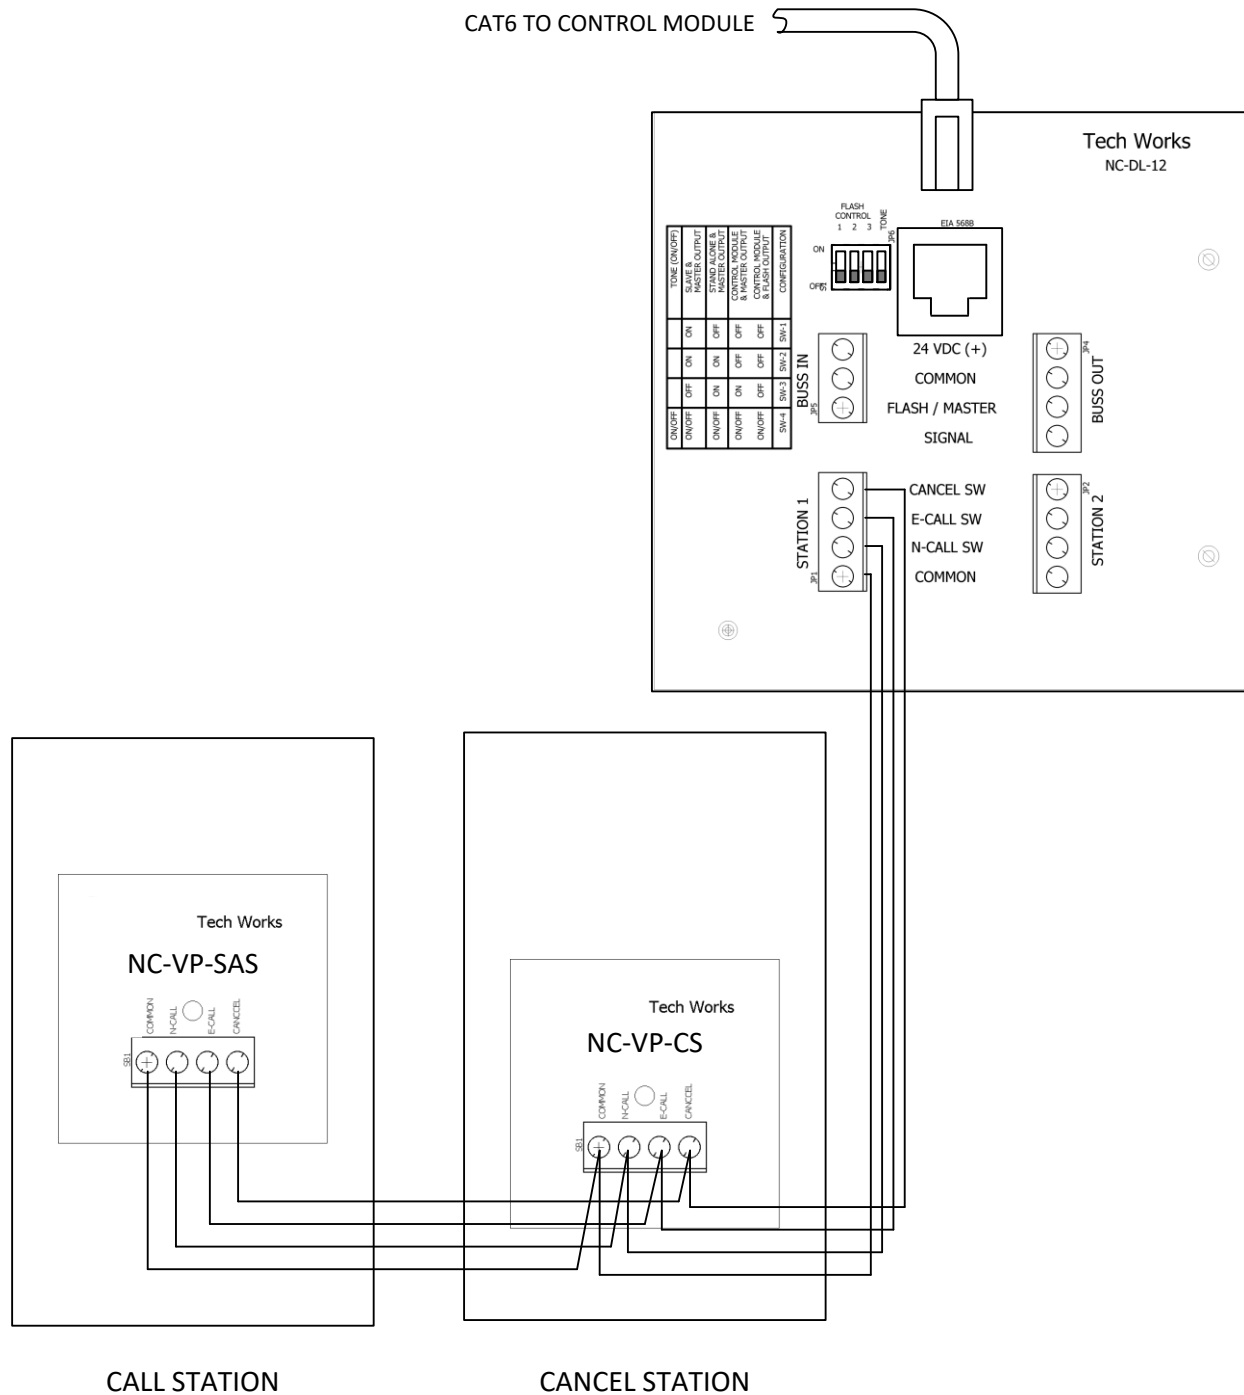

To install a Cancel Only Station simply hook it in parallel with and other Tech Works NC-Series Station

